

CUT OUT TEMPLATE (GUIDE) FOR BLANCO PRECIS SUPER SINGLE UNDERMOUNT

762 x 431.8 (30" x 17")

Installation Instructions

Several different countertop materials exist. Use an installation method that is appropriate for the countertop material.

Countertop cut-out. (see fig. A)

1. Prior to cutting the countertop, ensure the sink will fit inside the sink cabinet.
Determine the position of the sink and tap hole(s) on the countertop (1) see fig. A.

For wood countertops, laminate countertops using a Counter-Seal™ ring or solid surface countertops with a plywood base.


1. Position the clips. (See fig. B).
2. Drill holes for anchor plugs. (See fig. C).
4. Insert anchor plug (1).
5. Apply epoxy adhesive (2) onto bowl (3).
6. Press bowl against countertop and hold in place using two-by-fours, adjustable extension rods or spreaders.
7. Mount brackets (4) and screw (5).
8. Remove excess adhesive.

For solid surface materials without a plywood base

Use epoxy to adhere the sink to the countertop and support blocks in wood, solid surface or plastic around the bowls for support. Use two-by-fours, adjustable extension rod or spreaders to hold the sink in place while the epoxy cures.

Attention: With stone and granite use only neutral silicones.

BLANCO

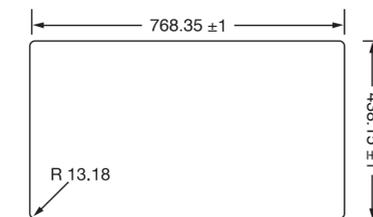

1:10
CUT-OUT DIMENSIONS

