


Instructions d'installation de crépine base et standard (art.: 406216 & 406314)

1. Retirer le bouchon (A).
2. Désassembler le renvoi par dévisser la tige d'assemblage (B) à l'aide d'un tournevis plat ou d'une pièce de monnaie.
3. Séparer les pièces; glisser le mince joint d'étanchéité (D) sous le panier en métal (C) et centrer les pièces dans l'évier (par le dessus).
4. Insérer l'épais joint d'étanchéité (F) à l'intérieur de la bonde en plastique (G), en orientant les nervures vers le haut (voir dia.1). Centrer la bonde en plastique (G) au trou de l'évier en dessous.
5. Par le dessus, insérer la tige d'assemblage (B) dans le centre du panier en métal (C) et dans le centre de la bonde en plastique (G) et resserrer en s'assurant que le mince joint d'étanchéité (D) demeure correctement positionné sous le panier en métal (C).
6. Insérer le bouchon (A) dans le panier en métal (C).
7. Raccorder le drain de plomberie conformément aux exigences des codes du bâtiment locaux; effectuer un essai d'étanchéité pour les fuites.

NOTE: ne pas utiliser de mastic Plomberie.

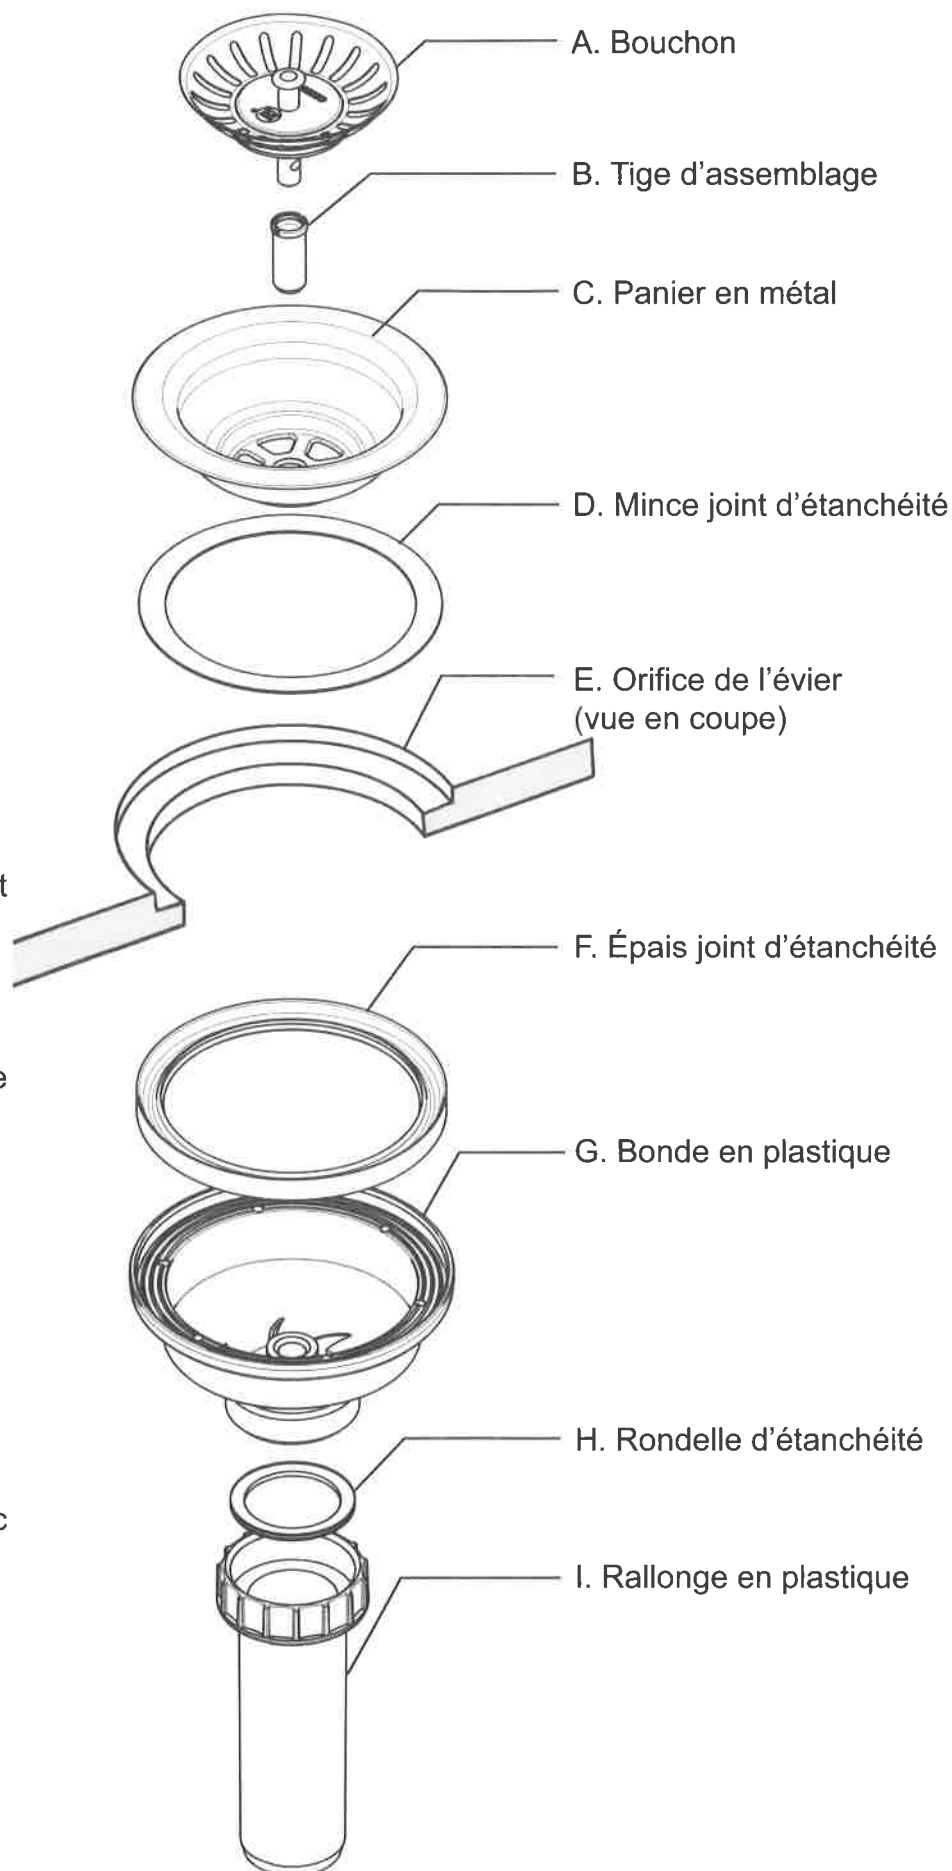

dia. 1

08/21/2017 REV.:39/2017


BLANCO

Drain Installation Instructions

(Item# 406216 & 406314)

1. Remove the strainer (A).
2. Disassemble the outlet by removing the main connecting screw using a flat head screwdriver or a coin (B).
3. Separate the parts and place the thin gasket (D) under the metal flange (C) and center them in the sink hole from above.
4. Fit the large rubber washer (F) inside the top rim of the plastic flange (G) with the ridges facing up (see dia. 1). Center the plastic flange (G) to the sink hole from underneath.
5. Fit the main connecting screw (B) from above through the center hole of the metal basket (C) and into the center hole of the plastic flange (G) and tighten while making sure the thin gasket (D) stays correctly positioned under the metal flange (C).
6. Place the strainer (A) into the metal basket (C).
7. Connect to waste plumbing according to relevant plumbing regulations and test for leaks.

NOTE: Plumbers Putty is not required

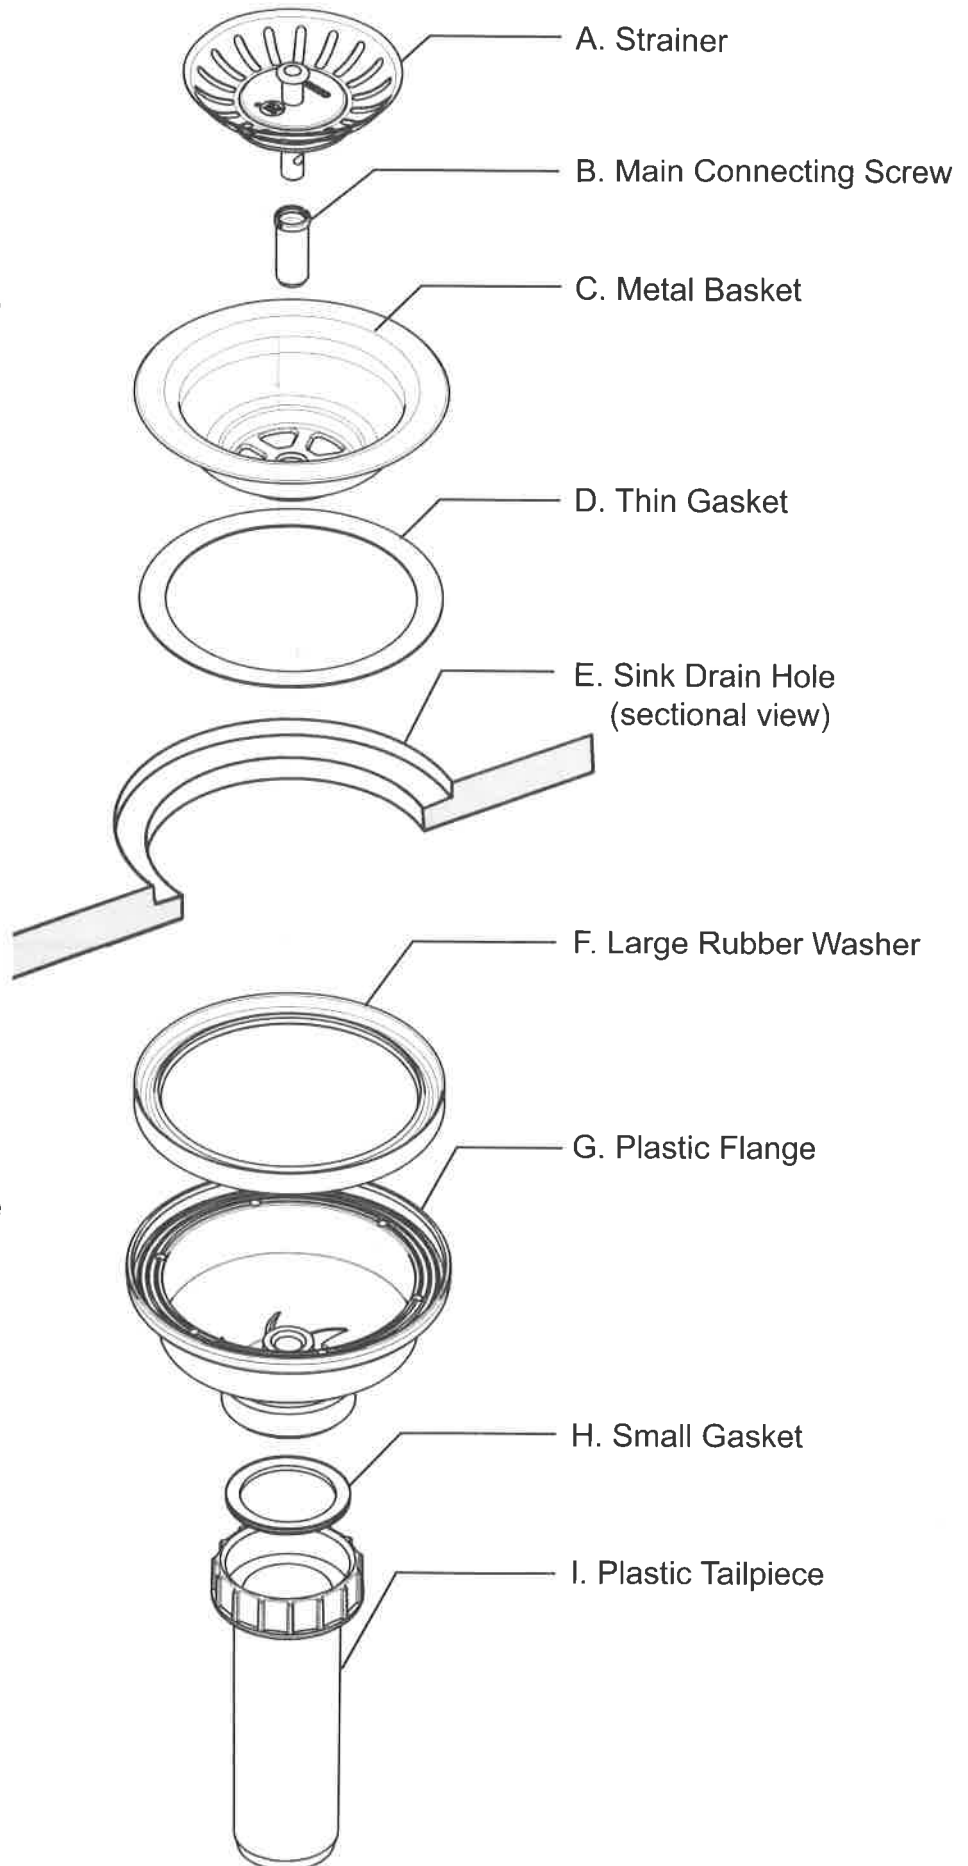

dia. 1

08/21/2017 REV.:39/2017

BLANCO