


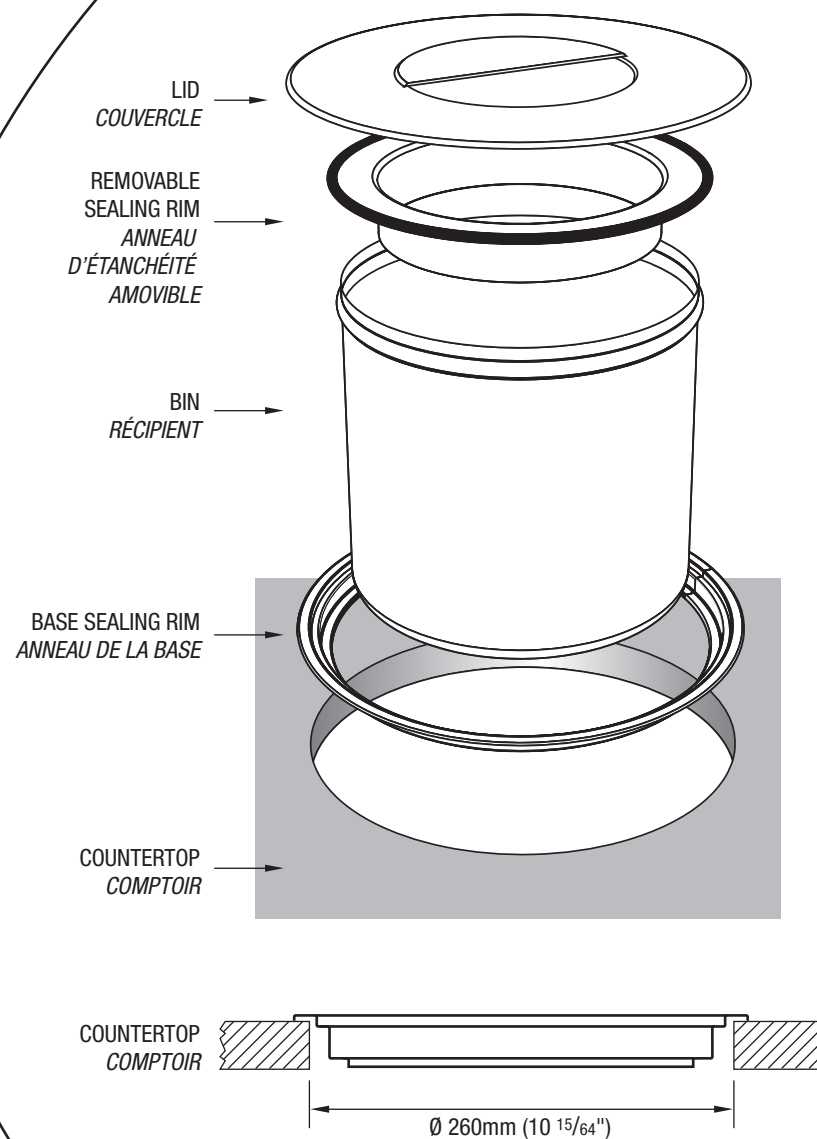

# BLANCO

## SOLON Drop-in

### Model No. 512336 Installation Guideline

This BLANCO template provides a cut-out where the SOLON waste bin will be installed into your countertop. This product does not require any clipping system.

1. Ensure the position of the SOLON waste bin will be free from any obstruction.
2. Determine placement of SOLON on your countertop using the template.
3. Cut a 260 mm (10 15/64") hole through the countertop.
4. Apply a bead of silicon around the base rim perimeter of the countertop.
5. Position and press the SOLON base rim onto the silicon seal.  
Follow silicon curing directions.
6. Stack your SOLON waste bin as shown in diagram.

**Attention:** With stone and granite countertops use neutral silicones. BLANCO does not assume any responsibility for water damage if the opening is not properly sealed.

**Attention:** BLANCO advises the SOLON Drop-In be installed by a professional fabricator if used on stone/granite countertops.

## SOLON, pose en surface

### Directives d'installation, no de modèle : 512336

Ce gabarit BLANCO permet de découper, dans le comptoir, l'ouverture où reposera le contenant du vide rebuts SOLON. L'installation ne requiert pas d'attaches spéciales.

1. Choisissez un emplacement où le récipient du SOLON pourra s'enfoncer librement sous le comptoir.
2. À l'aide du gabarit, tracez le contour de l'ouverture à l'emplacement choisi.
3. Découpez une ouverture de 260 mm (10 15/64") dans le comptoir.
4. Appliquez un cordon de silicone tout autour de l'ouverture du comptoir.
5. Insérez l'anneau de la base dans l'ouverture et appuyez dessus afin de bien sceller le joint de silicone. Assurez-vous de suivre les directives de cure du fabricant de silicone.
6. Empilez les composantes du vide rebuts SOLON comme illustré.

**Attention :** Il faut utiliser du silicone non corrosif avec les comptoirs de pierre ou de granit. BLANCO n'assume aucune responsabilité pour les dommages causés par l'eau lorsque l'ouverture n'est pas correctement étanchéifiée.

**Attention :** BLANCO suggère de confier l'installation du vide rebuts SOLON en surface à un professionnel lorsqu'il est posé sur un comptoir de pierre ou de granit.

Ø 260mm (10 15/64")

**401005**

REV 00-06/09