

BLANCO CULINA II Sensor





temperature
5 - 71 °C
(40 - 160 °F)




pressure
1.4 - 8.6 bar
(20 - 125 psi)




After installation, please pass these instructions on to the end customer.


WARNING

Magnetic Field.
Can be harmful to pacemaker wearers.
Pacemaker wearers stay back 25 cm (10 in).







BLANCOCULINA II Sensor

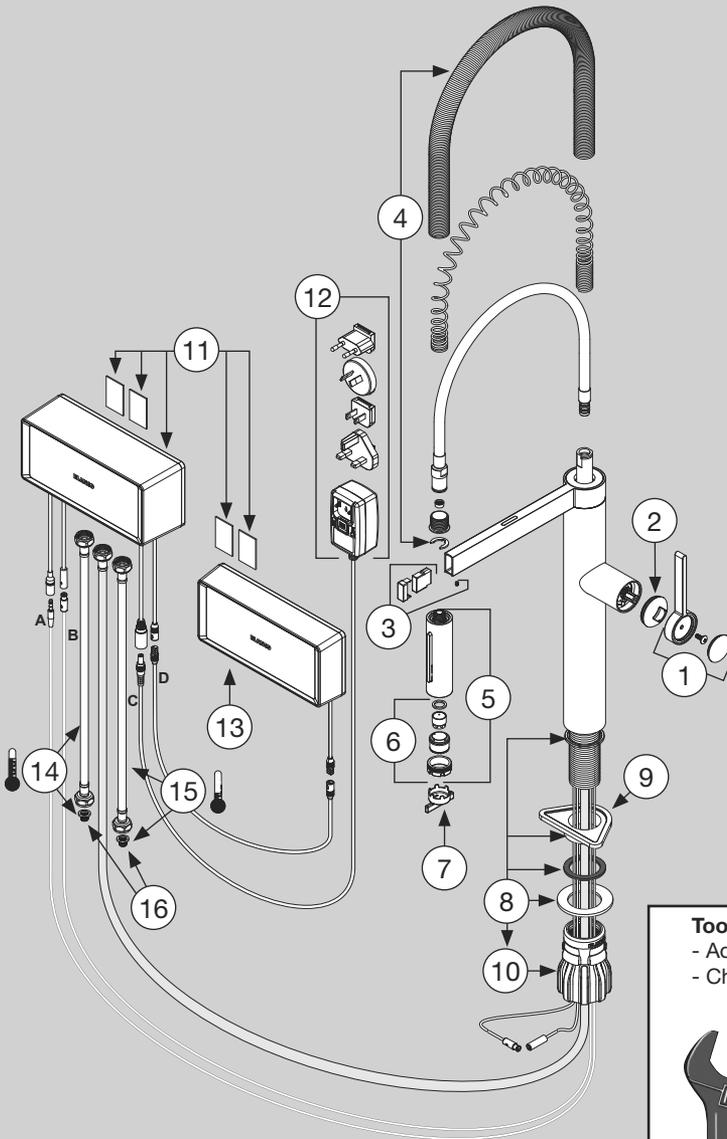


Tools needed:
 - Adjustable wrench
 - Channel lock pliers

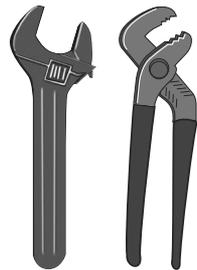

INSTALLATION

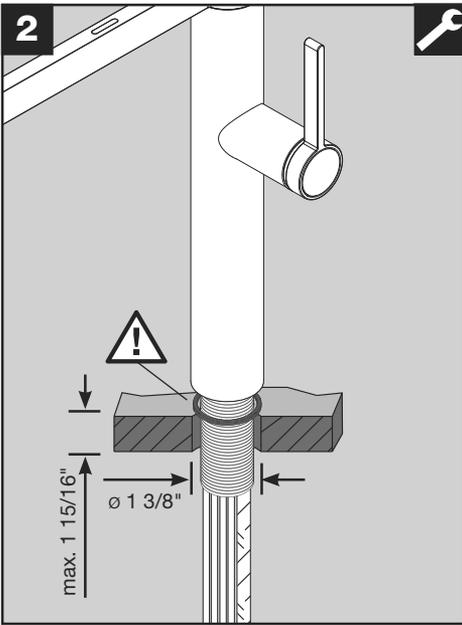


Place faucet through $1\ 3/8''$ hole. Make sure that the sealing ring on the upper sink/counter top side is in its correct position.

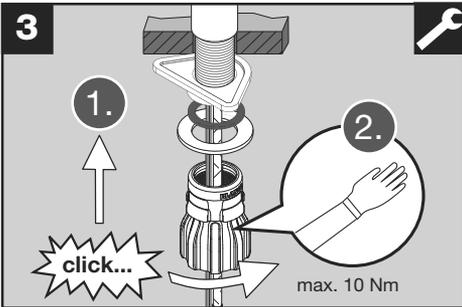


Secure faucet to sink/counter top using mounting hardware (8).

The proper sequence of hardware is:


- triangular reinforcement base (9),
- rubber washer,
- metal washer,
- mounting nut (10).

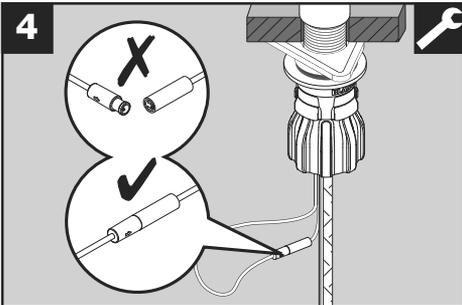

Make sure the two short cables below the faucet are plugged together.

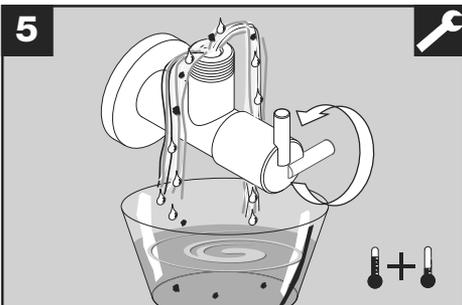


Before connecting supply lines to the water valves, flush each water valve to remove dirt and particles that can affect the functioning of the faucet and void warranty.

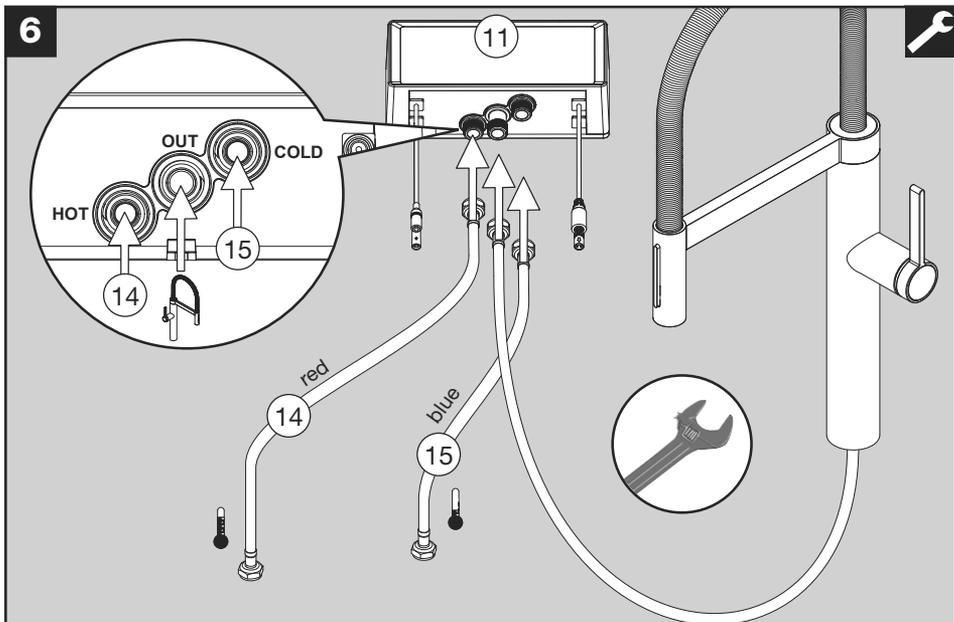


Connect three lines to the control box:

- LEFT (HOT): red supply line for hot water
- MIDDLE (OUT): faucet line
- RIGHT (COLD): blue supply line for cold water

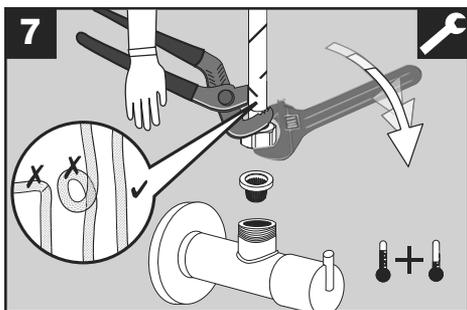

Connect red supply line to hot water valve and blue supply line to cold water valve.

Hold line while tightening nut to prevent line from twisting. Do not over tighten.

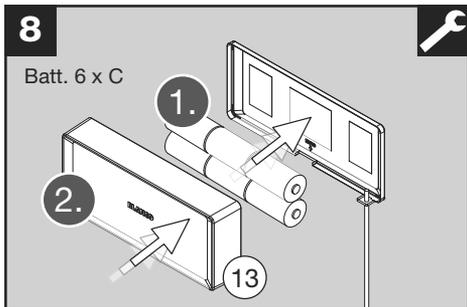


Insert 6 batteries type C into the battery box.

9


Option A




1.

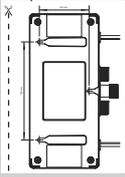


2.

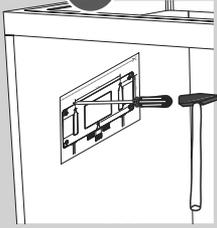

3.

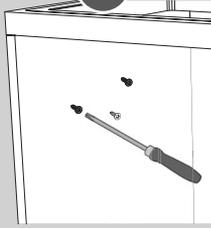



4.

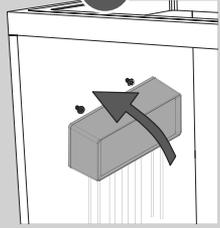


Option B




1.

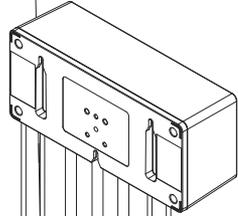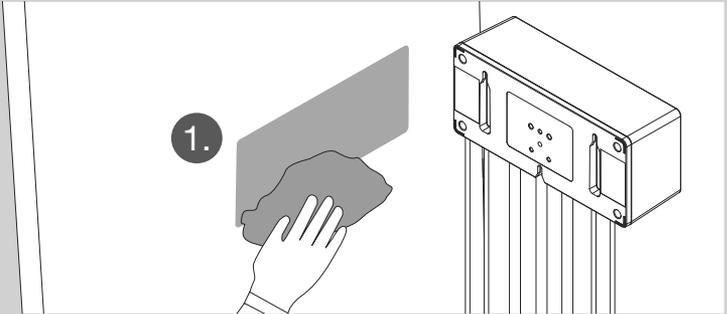


2.

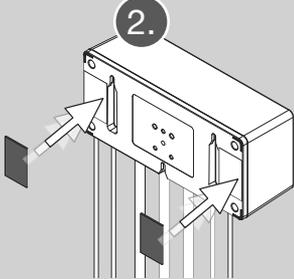

3.

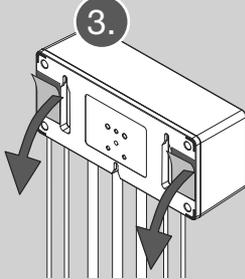


4.

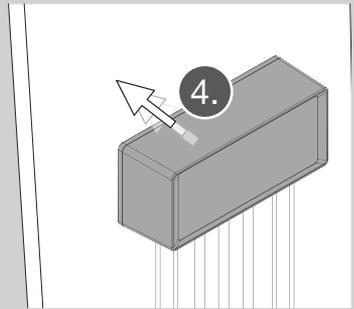**Installing the control box:**

The delivery includes two Velcro adhesive strips. These can optionally be used in either step 9 or step 10 (option B in each case).

Option A (screw fastening): Use the second last page of this user manual as a template and mark the holes. Fasten three screws into the base cabinet (take into account the thickness of the cabinet side wall). Attach the control box to the screws.


Option B (adhesive attachment): Attach the control box with the enclosed Velcro strips: Clean the surfaces where the adhesive strips will be attached (e.g. with alcohol). The surfaces must be free of dust and grease to ensure a good adhesive bond. Attach the Velcro adhesive strips to the control box rear. Removed protective film. Affix the control box to the chosen location (on the cleaned surface).

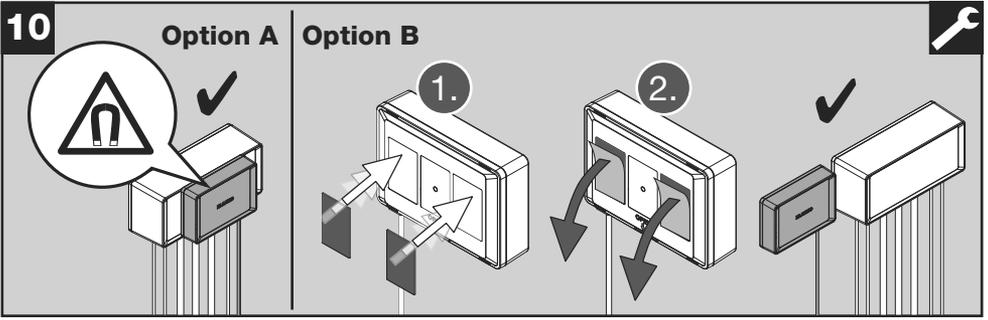

Installing the battery box:

Option A (attachment with magnet): Place the battery box on the front of the control box. The battery box automatically attaches itself to the control box thanks to the integrated magnets.

Option B (adhesive attachment): Attach the battery box with the enclosed Velcro strips: Clean the surfaces where the adhesive strips will be attached (e.g. with alcohol). The surfaces must be free of dust and grease to ensure a good adhesive bond. Attach the Velcro adhesive strips to the battery box rear. Removed protective film. Affix the battery box to the chosen location (on the cleaned surface).

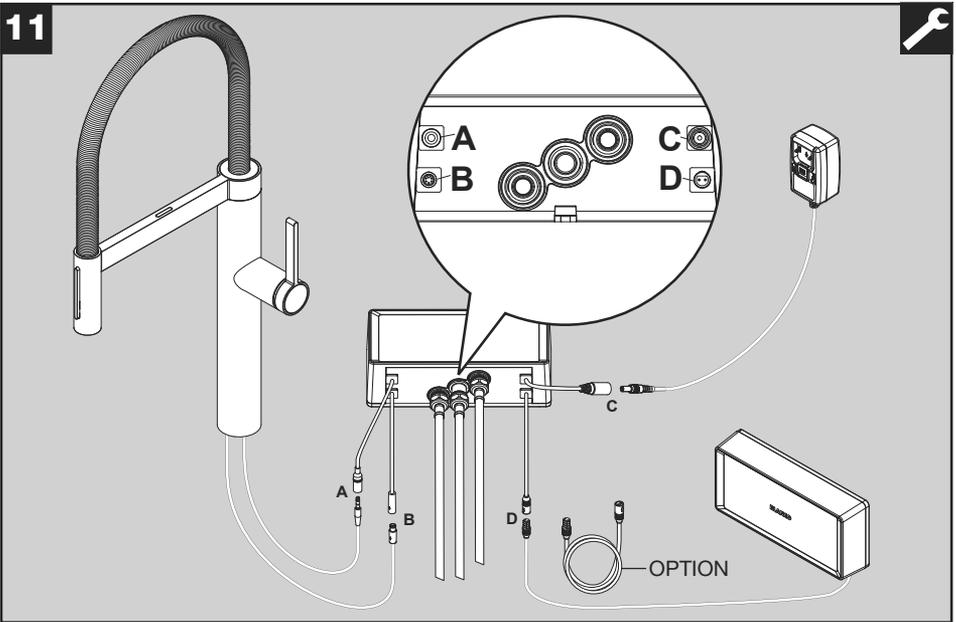


Connect four cables to the control box:


- A (front left): Faucet cartridge sensor
- B (rear left): Faucet side and top sensors
- C (front right): AC adapter
- D (rear right): Battery box - Depending on where you have placed the battery box, you can plug in the battery box cable directly or use the optional extension cable.

NOTICE:


For correct functionality the AC adapter (C) AND the battery box (D) is needed!

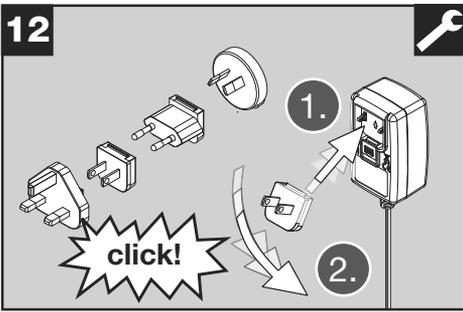


Install the appropriate plug adapter into the AC adapter.

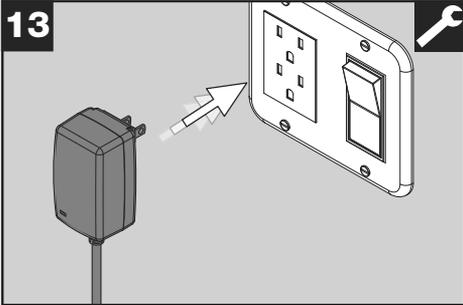


Plug the AC adapter into the power outlet.

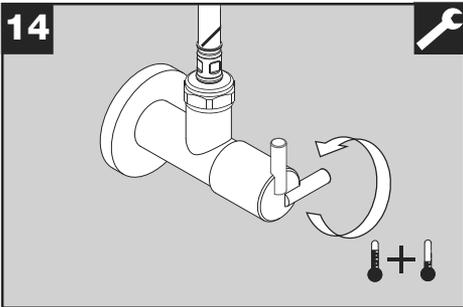


Open water valves slowly.

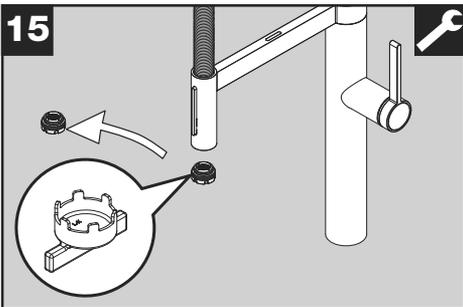

Remove aerator (6) using the aerator key (7).

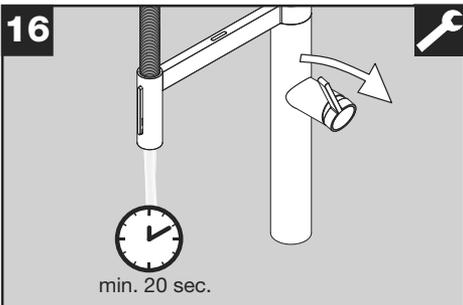


Turn the faucet on and let the water run for at least 20 seconds to ensure the lines and the faucet are flushed.

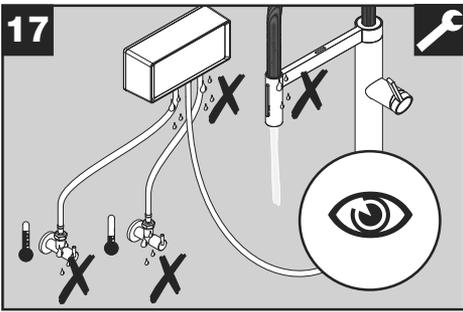


Double check all connections for leaks.


Re-tighten if necessary, but do not overtighten.

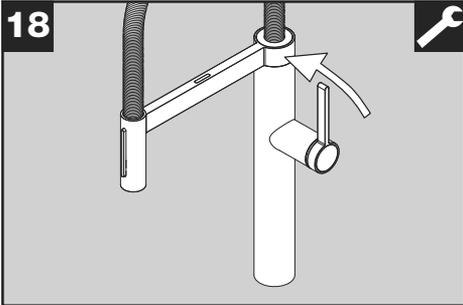

Turn the water off.

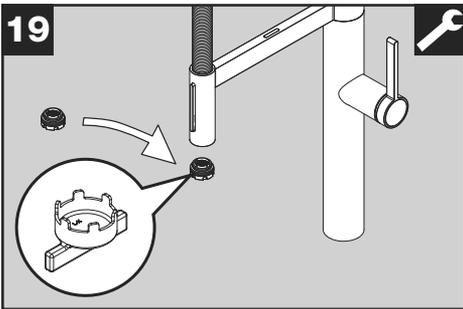

Reinstall the aerator.

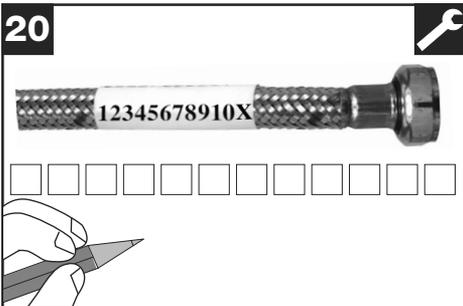

Write down the serial number located on the cold water hose.



Pass on to the user:

- this instruction manual,
- the user manual
- and the aerator key

BLANCO CANADA INC. and BLANCO AMERICA INC. are subject to the terms below pleased to offer a:

- Limited Lifetime Warranty with all BLANCO non-electronic faucets used in interior single-family domestic installations;
- Limited 10 Year Warranty with all BLANCO electronic faucets; and
- Limited 10 Year Warranty with all BLANCO faucets used in interior multi-residential and rental housing installations; and
- Limited 5 Year Warranty with all BLANCO faucets used for commercial purposes in interior installations.

BLANCO warrants its faucets to be free from all proven manufacturing defects in material and workmanship. BLANCO will repair or replace at no charge, excluding labor and freight, any faucet supplied by BLANCO that is proven to be defective under normal use.

LIMITED WARRANTY FOR COMPONENTS SUBJECT TO ORDINARY WEAR AND TEAR

- Limited 10 Year Warranty for all (i) mechanical components such as handles, cartridges, sprayheads, spray hoses, aerators and (ii) electronic faucets and components (batteries are excluded) used in interior single-family domestic installations and interior multi-residential and rental housing installations.
- Limited 5 Year Warranty for all (i) mechanical components such as handles, cartridges, spray heads, spray hoses, aerators and (ii) electronic faucets and components (batteries are excluded) used for commercial purposes in interior installations.

WARRANTY EXCLUSIONS AND OTHER TERMS

BLANCO shall not be liable in case of: (A) improper installation or modification, damages resulting from abuse, such as heavy impact or dropped objects, improper care or maintenance, improper applications (such as exposure to corrosive chemicals, photographic solutions, etc.), and any modifications made to the product after it left BLANCO premises; (B) wear and tear, including chips, scratches and stains that can occur under normal use; or (C) loss or damage to any person or property whatsoever resulting from a defective product.

All transportation costs to and from the point of purchase, labor, removal and reinstallation will be the responsibility of the purchaser.

For greater clarity, accessories that accompany the sink (strainers, waste fittings, waste chutes etc.) are under separate product-specific warranties.

TO THE EXTENT NOT PROHIBITED BY LAW, NO OTHER WARRANTY, WHETHER EXPRESS, IMPLIED, OR STATUTORY, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE SHALL BE DEEMED TO EXIST IN CONNECTION WITH ANY OF THE GOODS OR SERVICES SUPPLIED HEREUNDER, AND ALL IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTIES FOR A PERIOD GREATER THAN THE WARRANTY PERIOD CONTAINED IN BLANCO'S LIMITED WARRANTY, ARE HEREBY EXCLUDED. BLANCO SHALL NOT BE LIABLE FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES IN ANY WAY RELATED TO THE GOODS OR SERVICES SUPPLIED HEREUNDER. THE REMEDIES DESCRIBED IN THIS WARRANTY ARE YOUR SOLE AND EXCLUSIVE REMEDIES AND OUR ENTIRE LIABILITY FOR ANY BREACH OF THIS WARRANTY.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM JURISDICTION TO JURISDICTION. SOME PROVINCES, STATES OR OTHER JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF IMPLIED WARRANTIES OR OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS RELATING TO IMPLIED WARRANTIES, OR INCIDENTAL OR CONSEQUENTIAL DAMAGES MAY NOT APPLY TO YOU.

This warranty applies only to the products sold and installed in Canada and the U.S.A. Blanco Canada Inc. will be responsible for this warranty for products sold and installed in Canada and Blanco America, Inc. will be responsible for this warranty for products sold and installed in the U.S.A. This warranty supersedes all previous warranties for any BLANCO sink, faucet, accessory, soap dispenser, and repair part in the U.S.A and Canada. This is BLANCO's exclusive written warranty and the warranty is not transferable without the prior written consent of Blanco, in its sole and absolute discretion.


To obtain warranty service, please visit the support section on our website www.blanco.com.

BLANCO
www.blanco.com



BLANCO America Inc.
110 Mount Holly Bypass,
Lumberton, New Jersey 08048
Toll free phone: 1-800-451-5782
service.us@blanco.com

BLANCO Canada Inc.
100 Corporation Drive
Brampton, Ontario L6S 6B5
Toll free phone: 1-877-425-2626
service.ca@blanco.com

BLANCOCULINA II Sensor

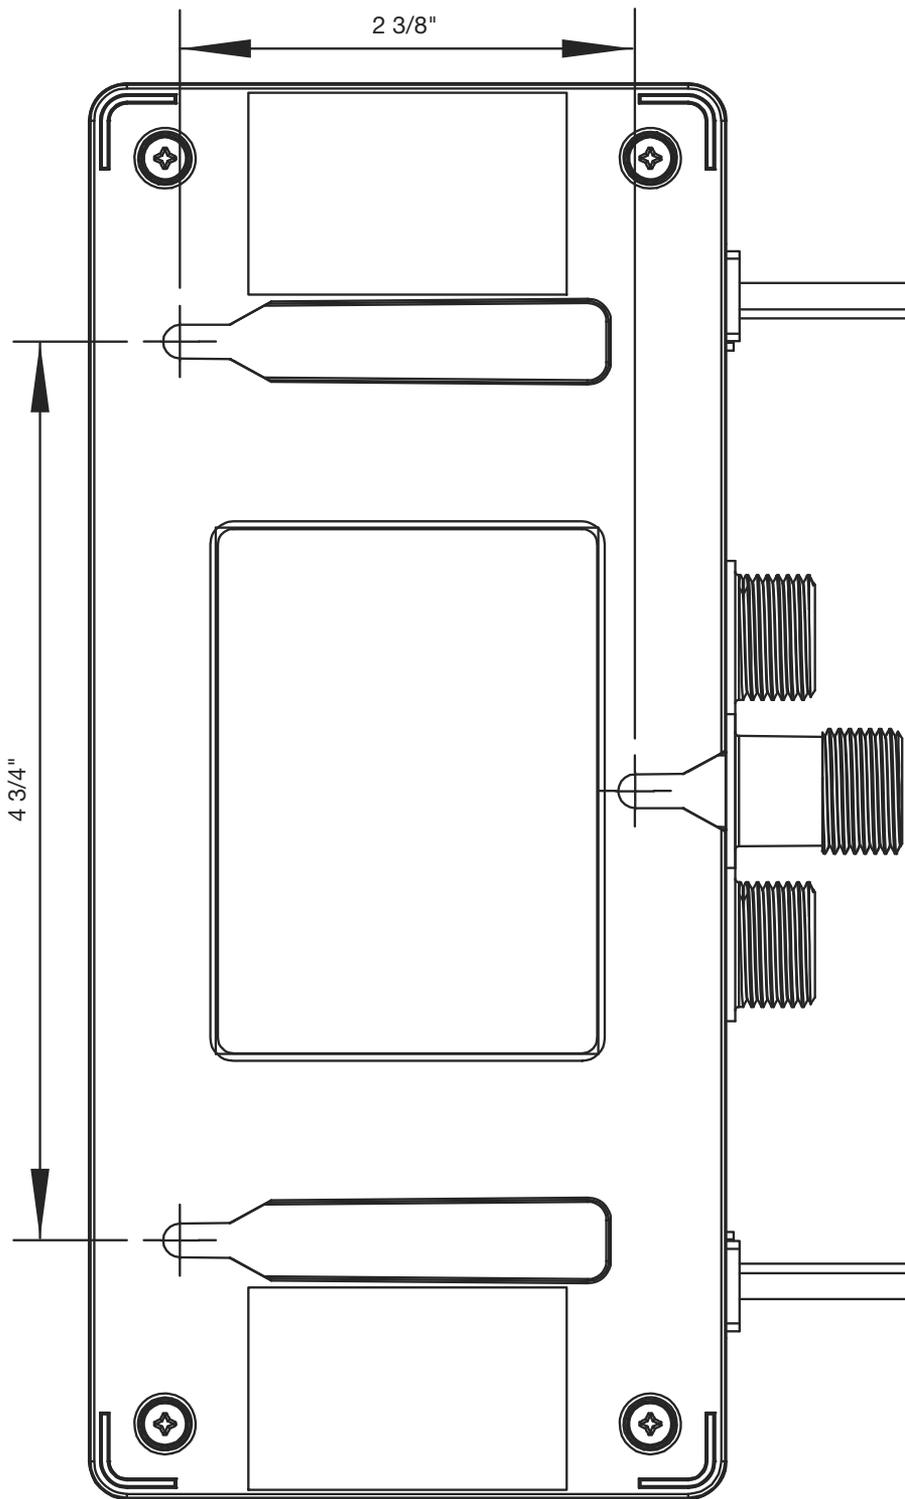

BLANCO CULINA II Sensor

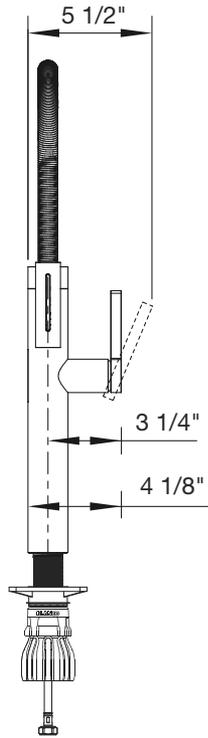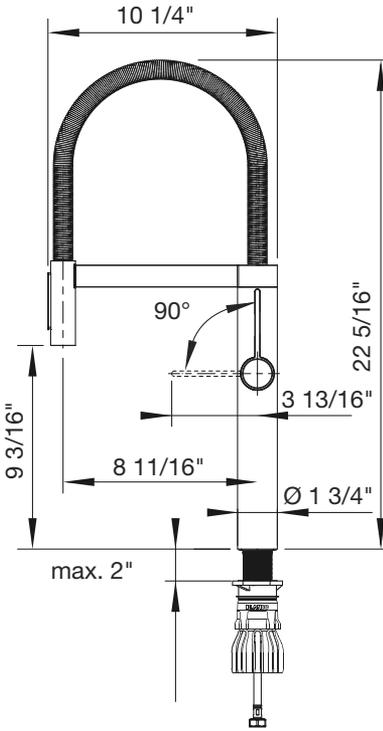

Rotates 140°

